


DALI VEGA

MANUAL

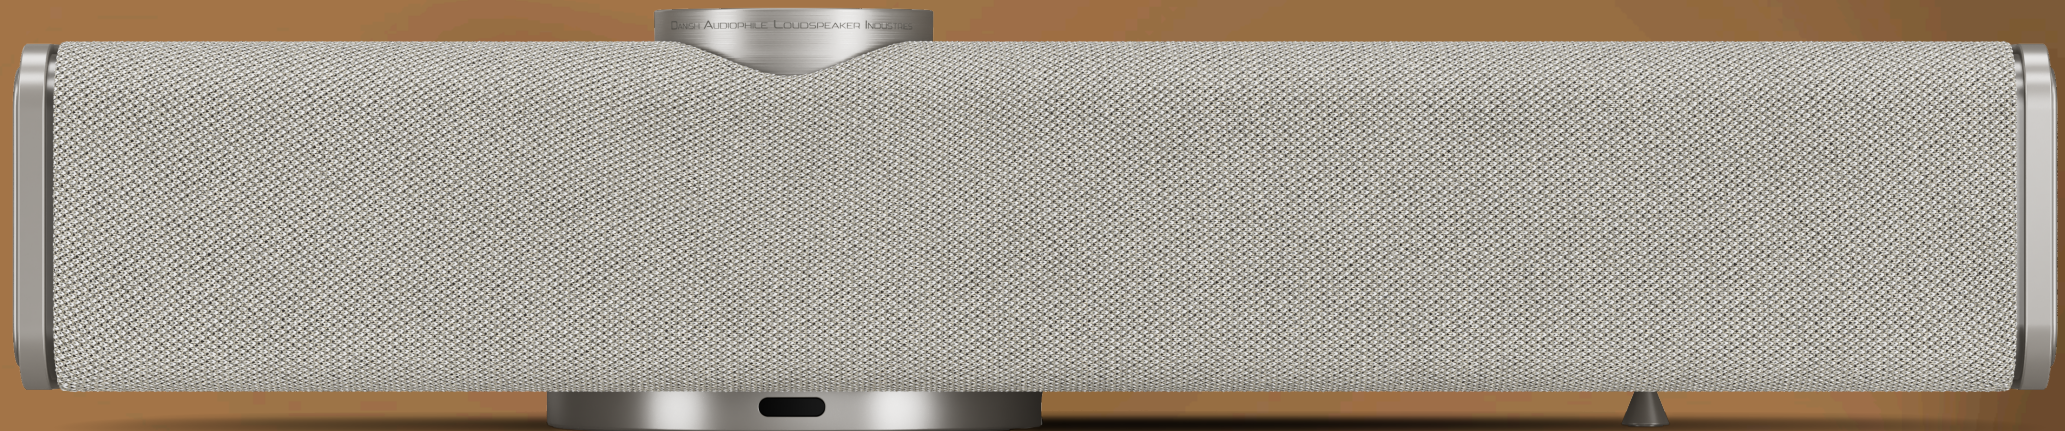

ENGLISH	2
DEUTSCH	36
FRANÇAISE	70
ESPAÑOL	104
ITALIANO	138

PORTUGUÊS	172
DANSK	206
NEDERLANDS	240
POLSKI	274
日本語	308

한국인	342
简体中文	376
中國傳統	410

DALI VEGA

MANUAL

VERSION 1.0 MARCH 2026
ENGLISH



DALI

CONTENT

1.	Introduction	4
2.	Pack contents	5
3.	Unpacking	6
4.	Wi-Fi connection & BluOS setup	7
5.	Positioning your DALI VEGA	8
6.	Cable management	10
7.	Wall-mounting your DALI VEGA.....	11
8.	Wired connections	16
9.	DALI VEGA configuration	19
10.	Your DALI VEGA in use	25
11.	Bluetooth connection.....	30
12.	Care and support.....	31
13.	BluOS troubleshooting.....	31
14.	Firmware updates	32
15.	Power consumption.....	33
16.	DALI VEGA specifications	34


1. INTRODUCTION

Congratulations on your new DALI VEGA. The DALI VEGA is a state-of-the-art, all-in-one sound system designed to be the performance benchmark for stylish single-box music in the home. DALI VEGA combines fabulous sound quality with immense versatility, intuitive ease of use, and a uniquely engaging Danish luxury design.

This user manual describes the setup and operation of the DALI VEGA.

You should read the manual before you start setting up and using your DALI VEGA.



The manual begins with a description of the contents of the DALI VEGA box and continues to cover DALI VEGA positioning, connections, configuration, and day-to-day use.

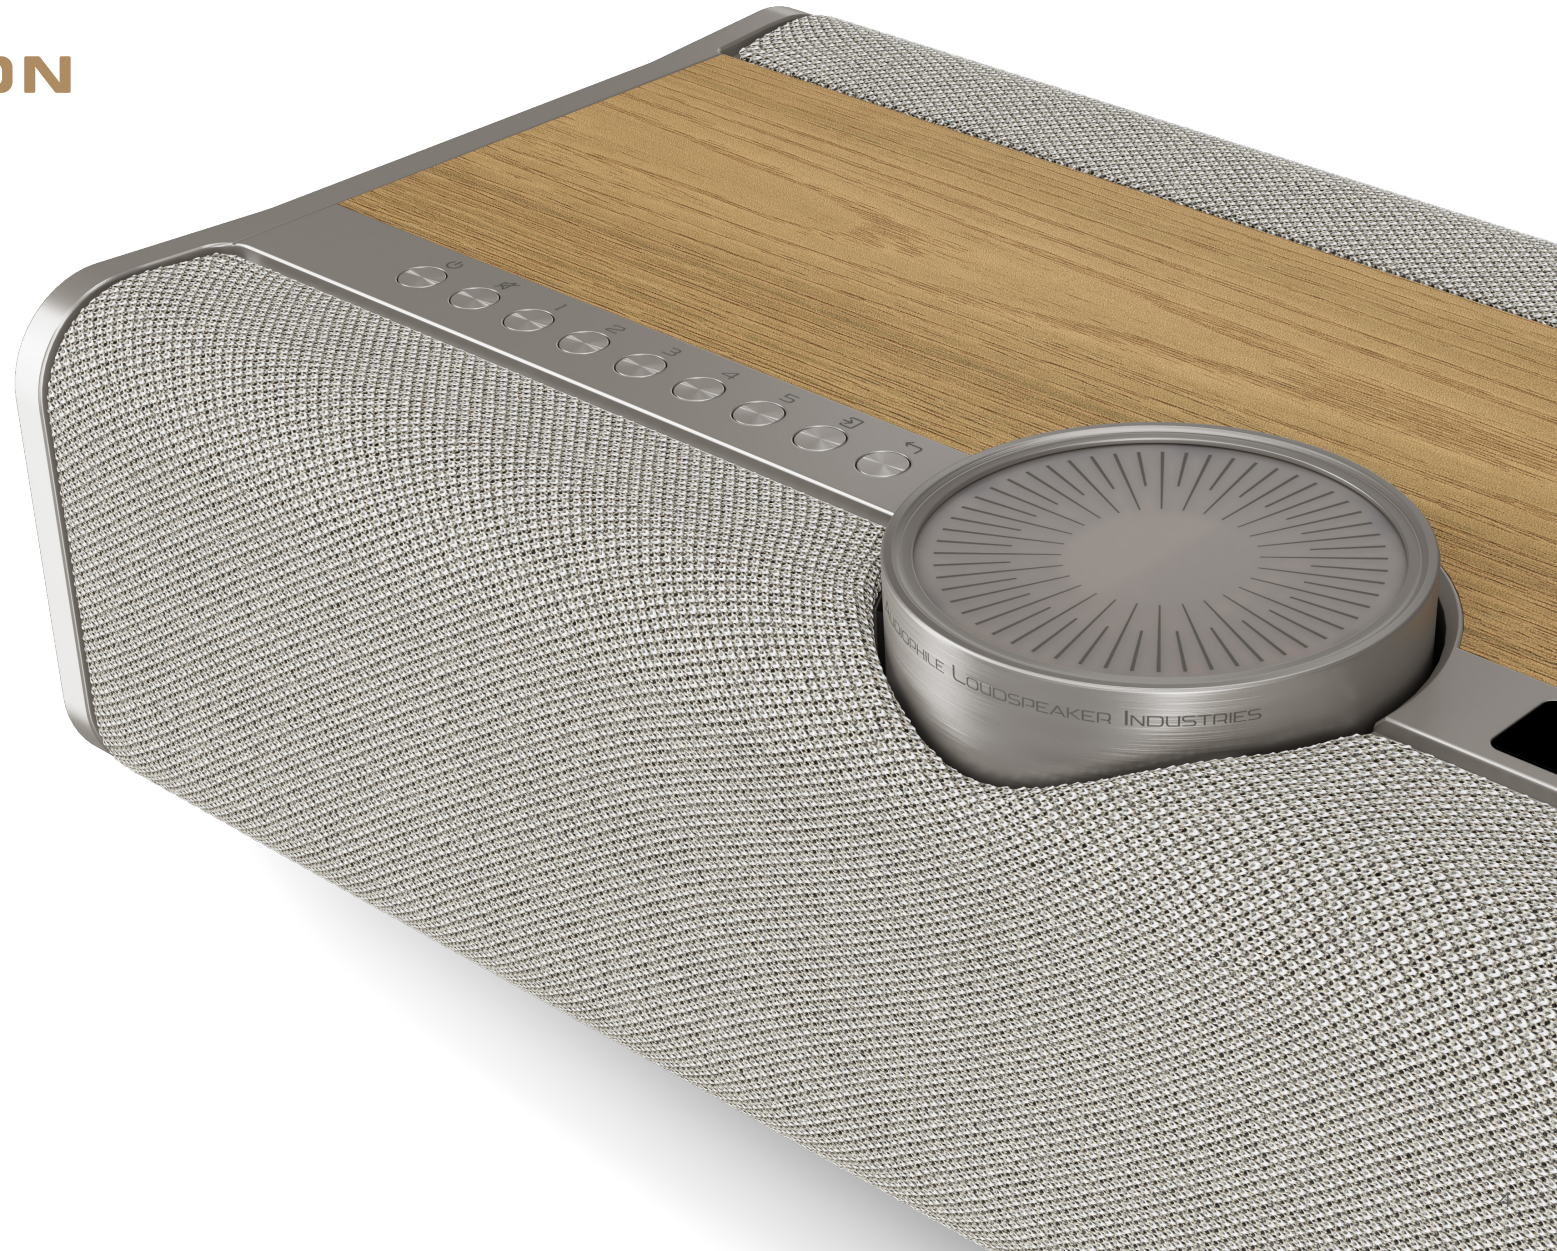


2. PACK CONTENTS

The contents of the DALI VEGA packaging are illustrated below.


! Avoid touching the passive radiator drivers at both ends of the DALI VEGA.

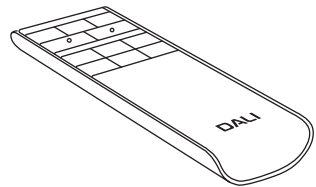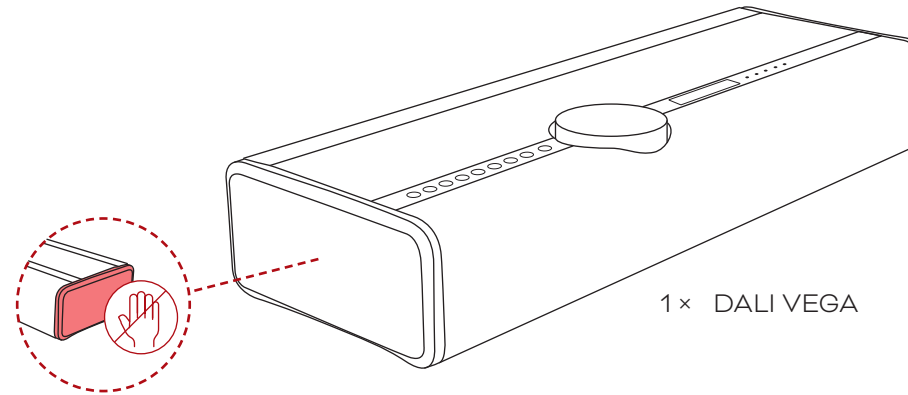


1 × Remote control
2 × AAA batteries (for Remote control)

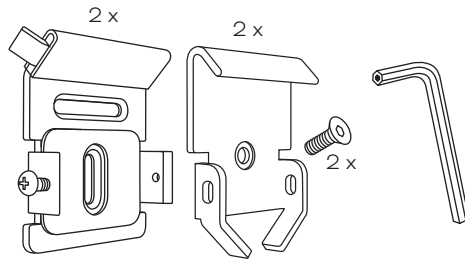


2 × Wall brackets (Wall)
2 × Wall brackets (VEGA)
2 × Screws for VEGA wall brackets
1 × M6 Allen key

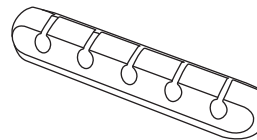

1 × Cable holder

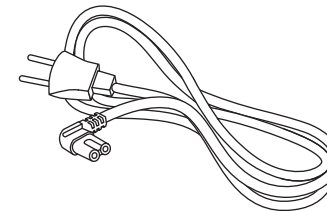


1 × Mains cable

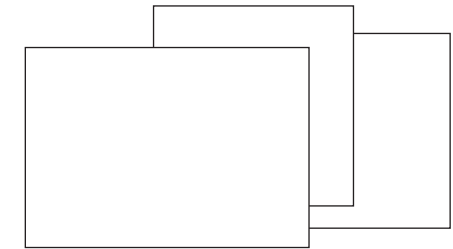


1 × Product registration card
1 × Quick start guide
2 × Wall mounting template
1 × Safety manual


3. UNPACKING

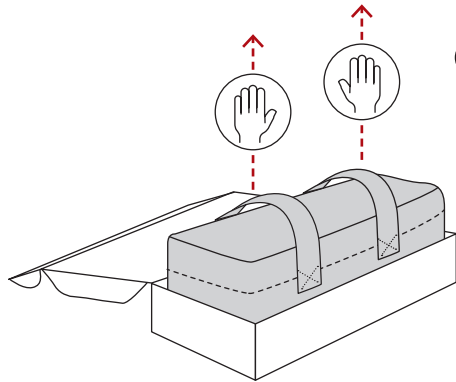


- 1** Open the box lid, and use both straps to lift the VEGA out of the box.

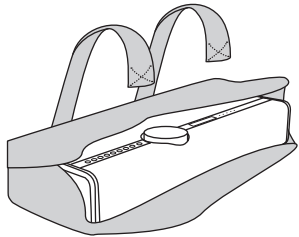


- 2** Release the Velcro straps and remove the cover.

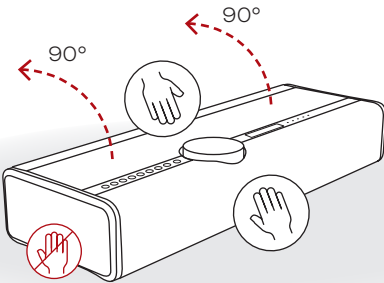


- 3** Tilt the VEGA 90 degrees to its rear-facing side. Open and remove the cable clip.

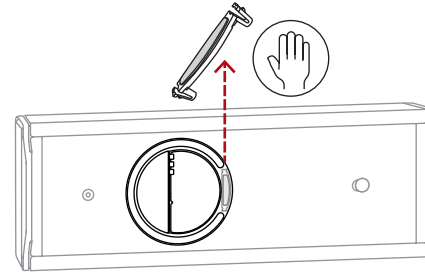

- 4** Plug in the power cable and any additional cables.

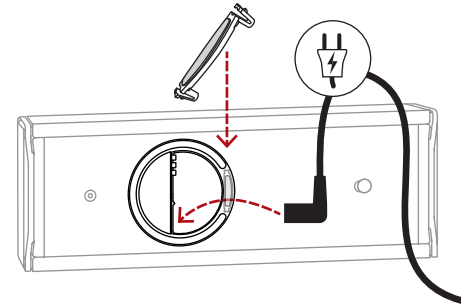


- 5** Attach the cable clip, then flip the VEGA back onto its feet.

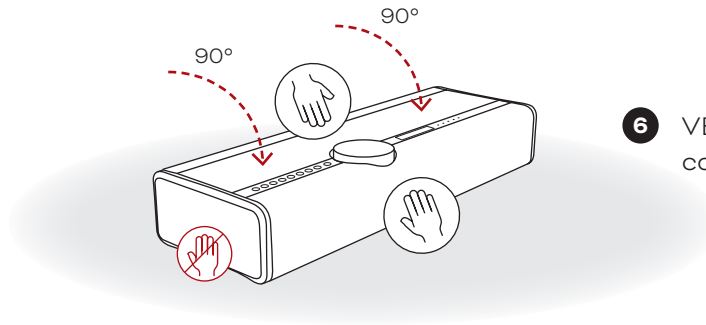

- 6** VEGA is now ready for Wi-Fi connection.

! IMPORTANT!

While unpacking, make sure not to touch the passive radiators.

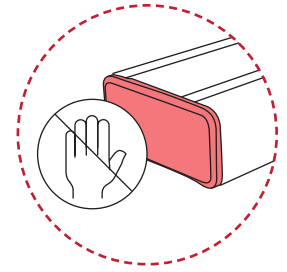

4. WI-FI CONNECTION & BLUOS SETUP

1 Power on your DALI VEGA

Wait for the BluOS LED to turn solid green, indicating “Hotspot” mode.

2 Get the BluOS app

Using your smartphone or tablet, download and open the BluOS app.



3 Add your DALI VEGA to your network

The “Add a player” wizard will guide you through the steps to complete your BluOS setup.



Go to bluesound.com/downloads to download the app

The initial network setup is done using the BluOS app on your smartphone or tablet. Make sure you have the App downloaded and installed, and your smartphone or tablet nearby as you get started.

! If you are using an iOS device, the DALI VEGA can also be connected to your Wi-Fi network via the “Set up new AirPlay speaker” option in your iOS Wi-Fi settings.




! If the LAN (network) socket of your DALI VEGA is connected to a home router or network switch, it will not require a Wi-Fi connection. Your DALI VEGA will become available for setup within the BluOS Controller app.

→ [Bluesound support page](#)


5. POSITIONING YOUR DALI VEGA

The DALI VEGA offers excellent versatility, making it suitable for installation in a wide variety of home locations. It can be placed on a table, a furniture unit, a shelf, or a window ledge, for example. And the DALI VEGA can also be wall-mounted in either landscape or portrait orientation using the DALI VEGA Wall Bracket. In terms of positioning your DALI VEGA, the only requirements are access to mains power and a network router or switch, if you prefer a wired network connection.


Depending on the orientation of your DALI VEGA, it will automatically adapt the stereo routing to its front and rear loudspeakers, as appropriate, to accommodate standing, landscape, or portrait orientation. Its display orientation will also rotate automatically.

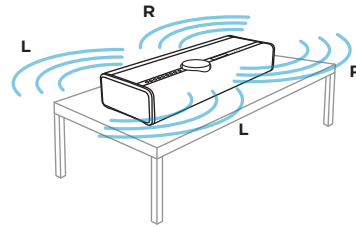


- 1 Standing: Free space**
DALI VEGA plays in both directions: front and back.
Recommended Rear Wall Distance setting: **Free**.

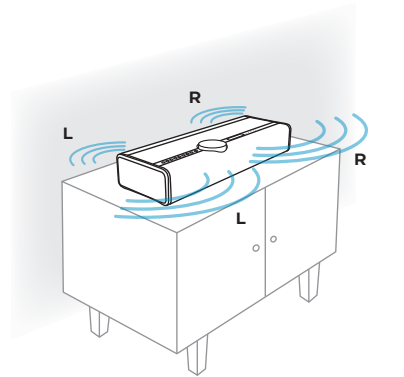


- 2 Standing: Near wall**
DALI VEGA plays more forwards than backwards.
Recommended Rear Wall Distance setting: **Medium**.

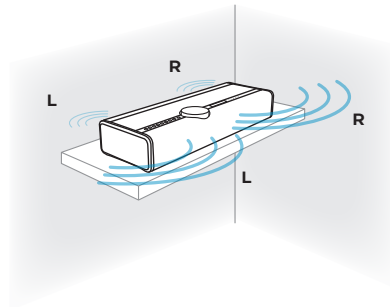

- 3 Standing: Close to corner/wall**
DALI VEGA plays even less backwards in this mode.
Recommended Rear Wall Distance setting: **Short**.

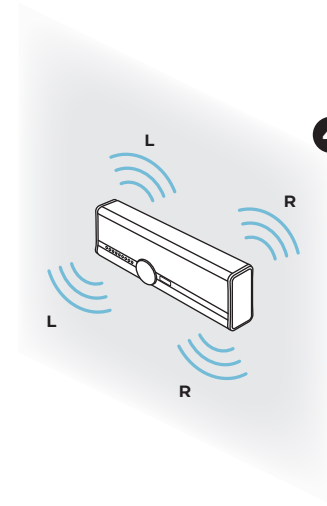

- 4 On wall: Landscape**
DALI VEGA plays in both directions.
Rear Wall Distance is automatically set.

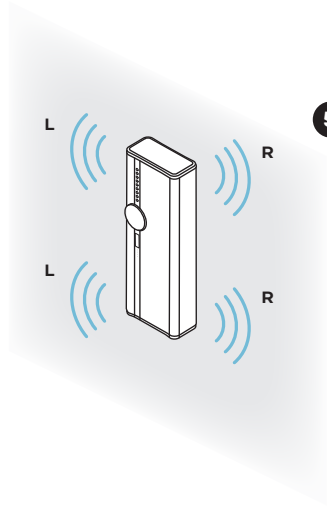

- 5 On wall: Portrait**
DALI VEGA plays in both directions.
The front drivers play the left channel, and the rear drivers play the right channel.
Rear Wall Distance is automatically set.

5. POSITIONING YOUR DALI VEGA

Adaptive Orientation Adjustment




The DALI VEGA is engineered with advanced Adaptive Orientation Adjustment technology developed in-house by DALI's engineers. Adaptive Orientation Adjustment enables seamless integration of your DALI VEGA into any living space, no matter how you place or mount it.

Equipped with an internal orientation sensor, VEGA intelligently detects its mounting orientation – whether it's standing on a shelf or table, or wall-mounted in landscape or portrait mode. And it automatically reconfigures stereo channel mapping to ensure optimal audio fidelity. This real-time

adjustment enhances spatial accuracy and stereo imaging, delivering a consistently immersive listening experience regardless of placement.


Adaptive Orientation Adjustment is a key component of VEGA's environment-aware design philosophy, allowing it to adapt acoustically to its user preferences and elevate musical performance with precision and clarity.

When you place your VEGA in the desired orientation, the VEGA display will indicate the activated Adaptive Orientation Adjustment mode by showing one of the three logos.

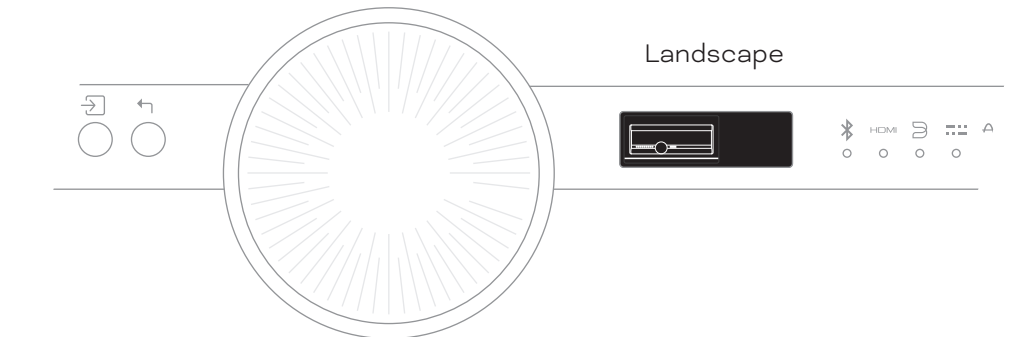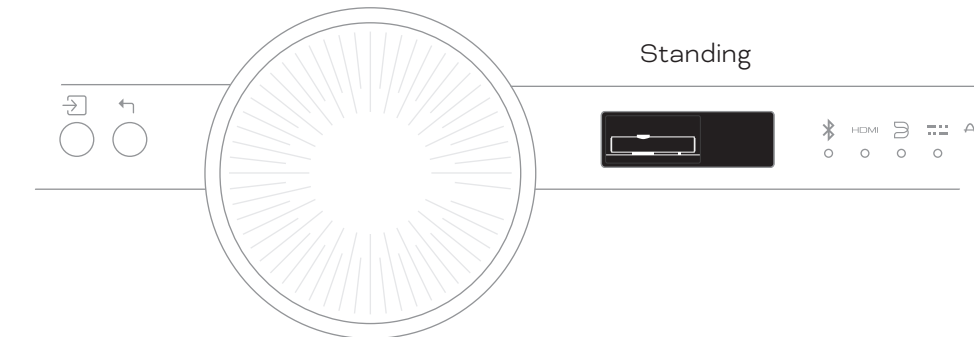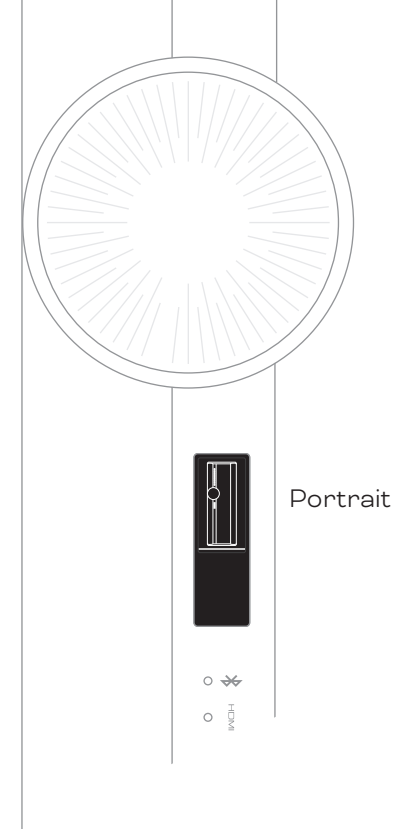

6. CABLE MANAGEMENT

On the back of the VEGA, you will find a cable clip, which can be opened using your fingers at both ends. Together with the supplied cable holder, this feature allows for easy cable management in any orientation or placement.

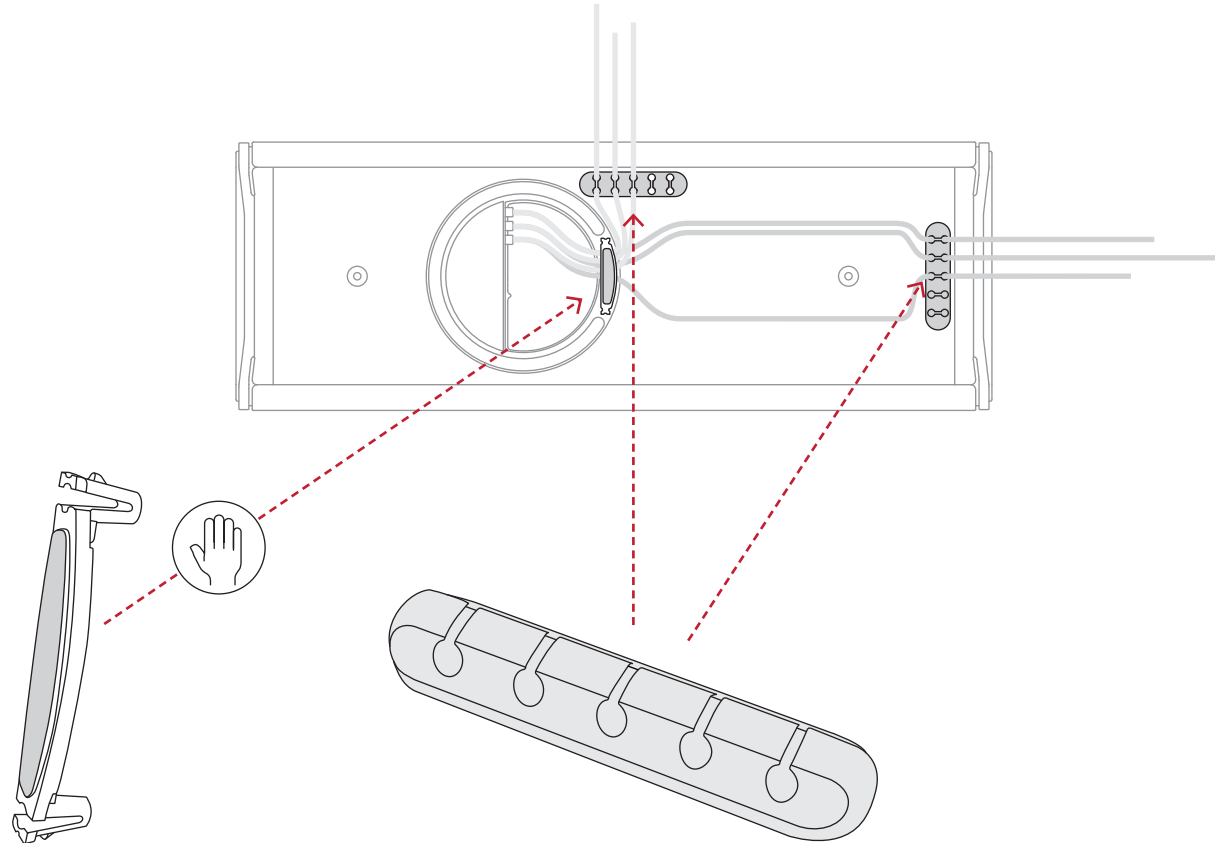

7. WALL-MOUNTING YOUR DALI VEGA

To mount the DALI VEGA on the wall in either landscape or portrait mode, use the four included wall brackets.


Two of the wall brackets are mounted with the included wall bracket screws on the back of the DALI VEGA using the M6 Allen key.

The two remaining wall brackets are mounted on the wall with four appropriate screws (not included).


Follow the steps on the next pages.

The brackets for DALI VEGA are mounted with one bracket screw each (included). Use an M6 Allen key and fasten the brackets securely in place.


Before mounting the speaker, loosen the safety screw/screws with a Phillips screwdriver (not included).

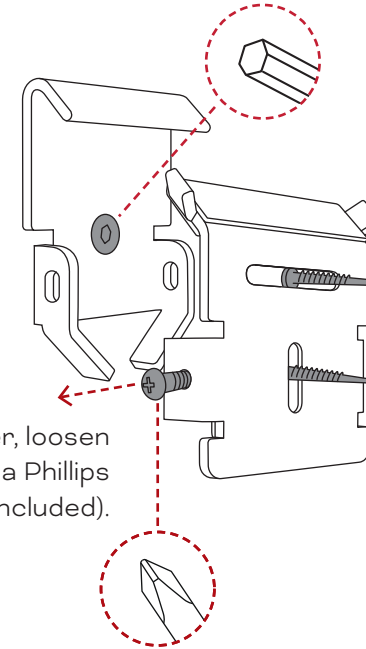

The brackets for the wall are mounted with two screws, appropriate for the wall type (not included).

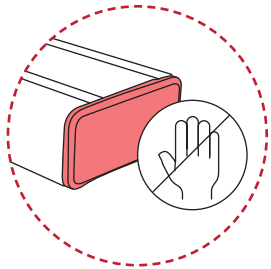

! While mounting, make sure not to touch the passive radiators.

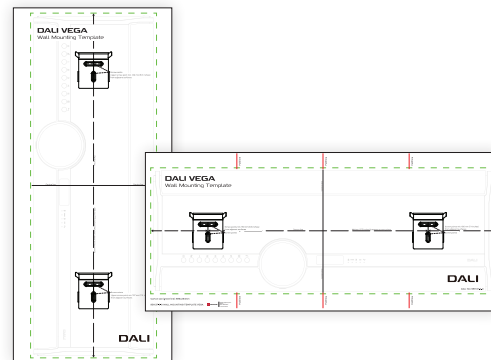


! Use the included **Wall Mounting Templates** to effortlessly determine the mounting placement of your wall brackets.


Two **Wall Mounting Templates** are included: one for landscape orientation and one for portrait orientation.

7. WALL-MOUNTING YOUR DALI VEGA



Landscape orientation (1/2)

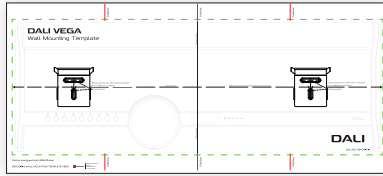

- 1 Use the included landscape wall-mounting template to mark the 2 x 2 drilling holes, then mount the two wall brackets on the wall.
- 2 Tilt the VEGA 90 degrees to its rear-facing side.

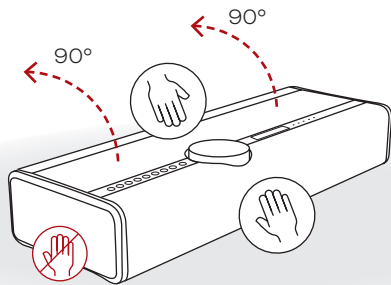

! Do NOT place the VEGA on its front- or top-facing side, as this can accidentally scratch the volume wheel.

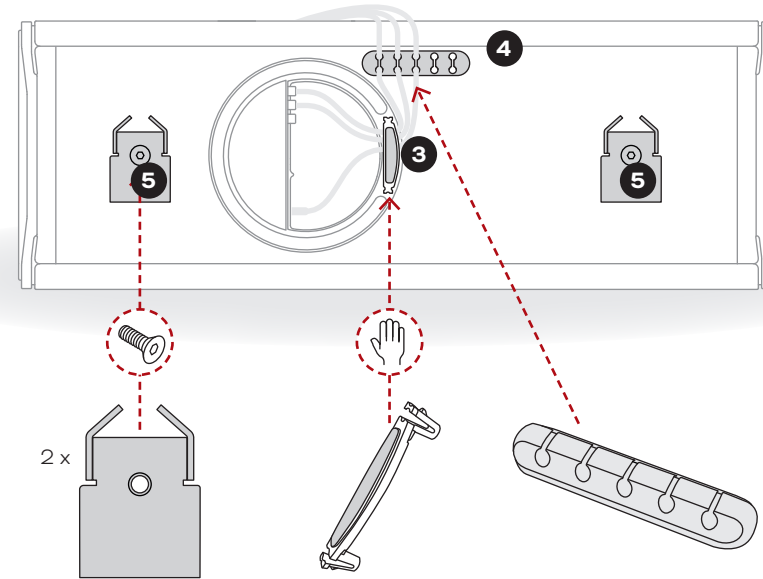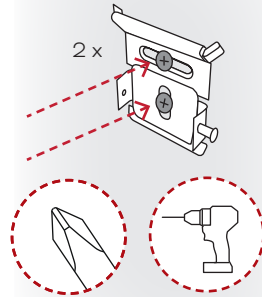


- 3 Mount the VEGA wall brackets for landscape orientation.
- 4 Place the self-adhesive cable holder and guide the cables through.
- 5 Remove the cable clip, connect your cables, and re-attach the cable clip.


7. WALL-MOUNTING YOUR DALI VEGA

Landscape orientation (2/2)

- 6** Flip the VEGA back on its feet.

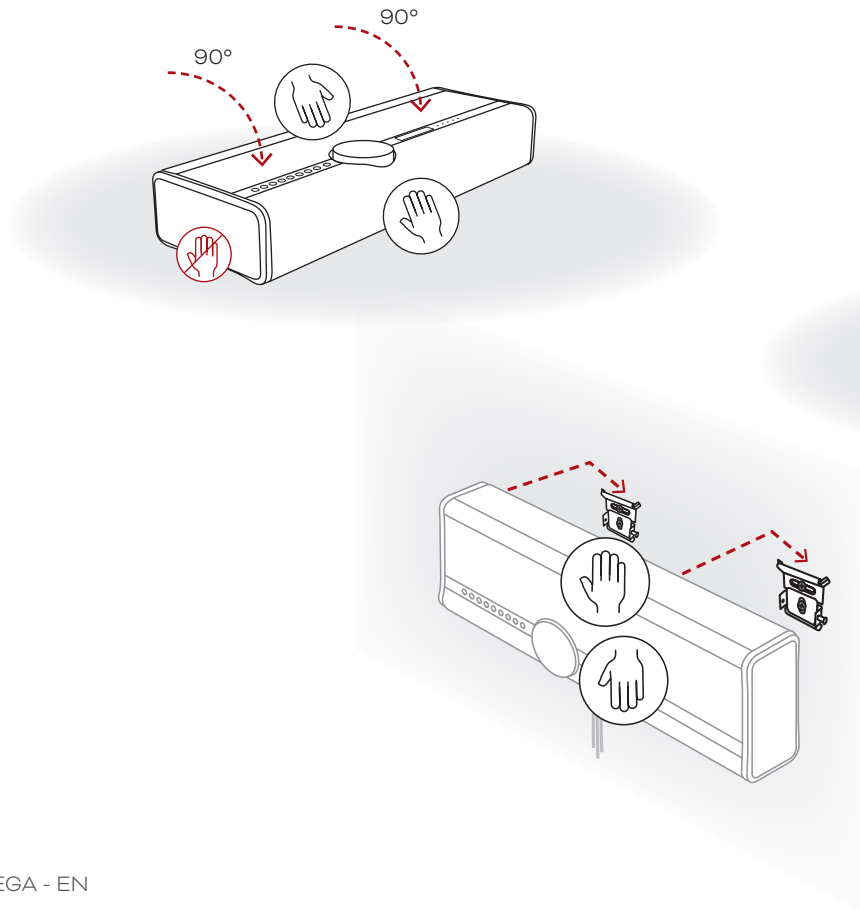


- 7** Lift the VEGA and turn its underside (and wall brackets) towards the wall.

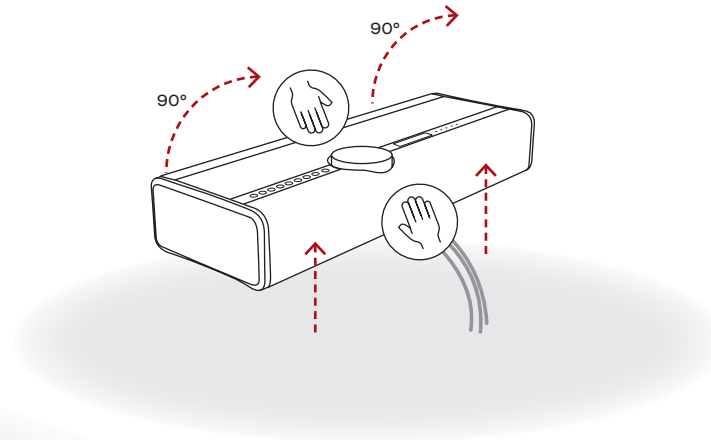



- 8** Carefully lift the VEGA into place and attach it to the brackets.

- 9** Tighten the safety screws using a Phillips screwdriver.

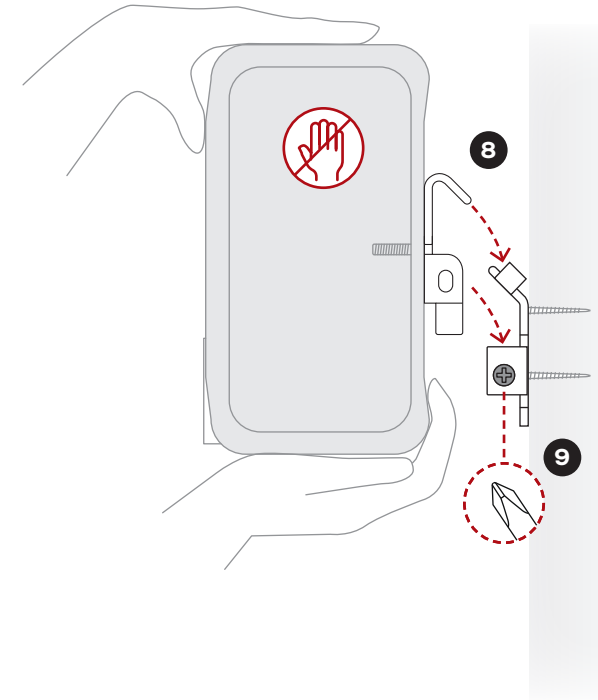



7. WALL-MOUNTING YOUR DALI VEGA

Portrait orientation (1/2)

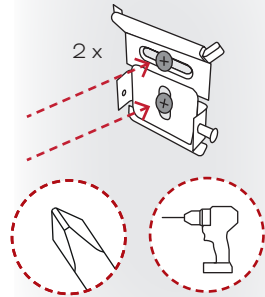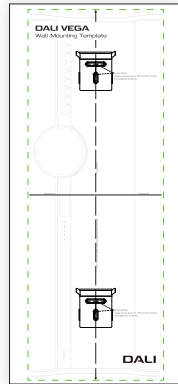

- 1 Use the included portrait wall-mounting template to mark the 2 x 2 drilling holes, then mount the two wall brackets on the wall.

- 2 Tilt the VEGA 90 degrees to its rear-facing side.

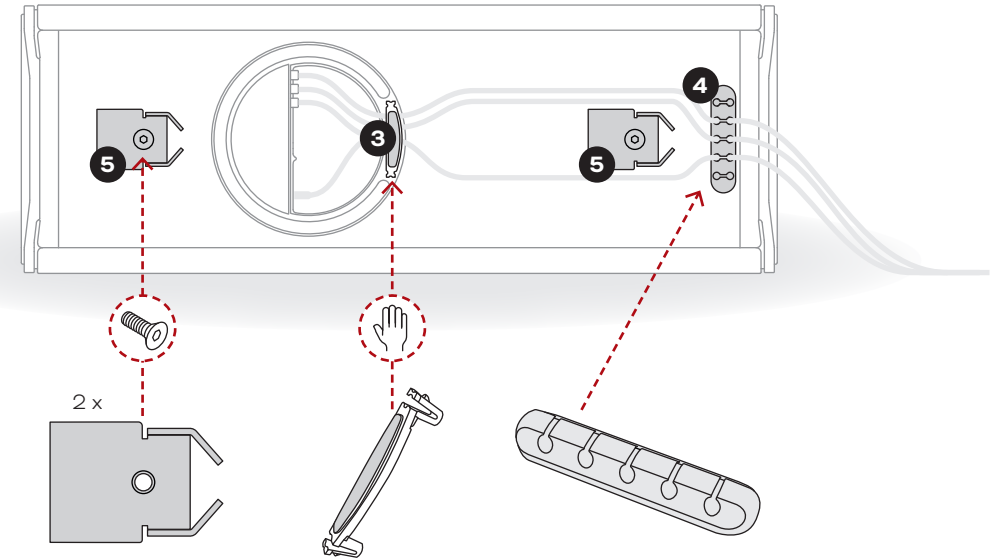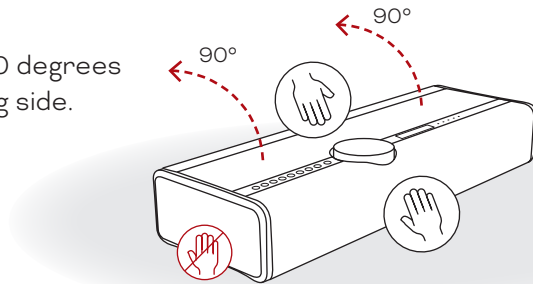


- 3 Remove the cable clip, connect your cables, and re-attach the cable clip.
- 4 Place the self-adhesive cable holder and guide the cables through.
- 5 Mount the VEGA wall brackets for portrait orientation.



7. WALL-MOUNTING YOUR DALI VEGA

Portrait orientation (2/2)

- 6** Flip the VEGA back on its feet.

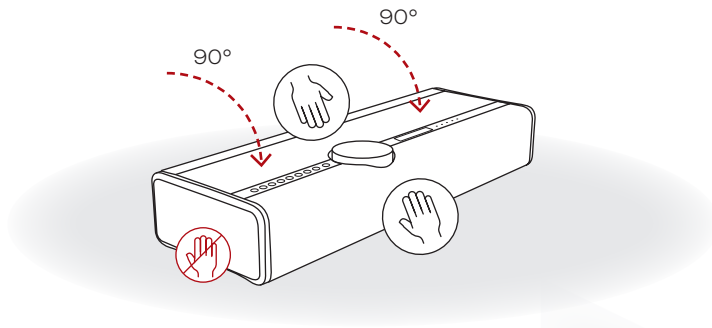


- 7** Lift up the VEGA, turn its underside (and wall brackets) towards the wall, and rotate it clockwise into portrait orientation.

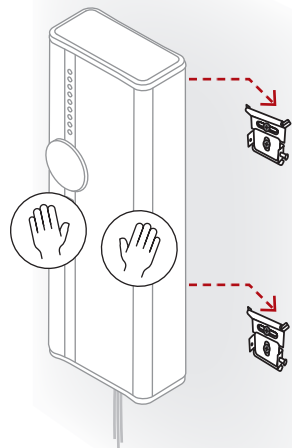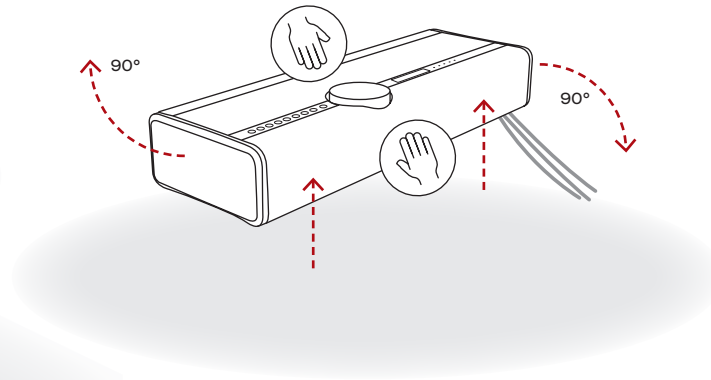

- 8** Carefully lift the VEGA into place and attach it to the brackets.

- 9** Tighten the safety screws using a Phillips screwdriver.

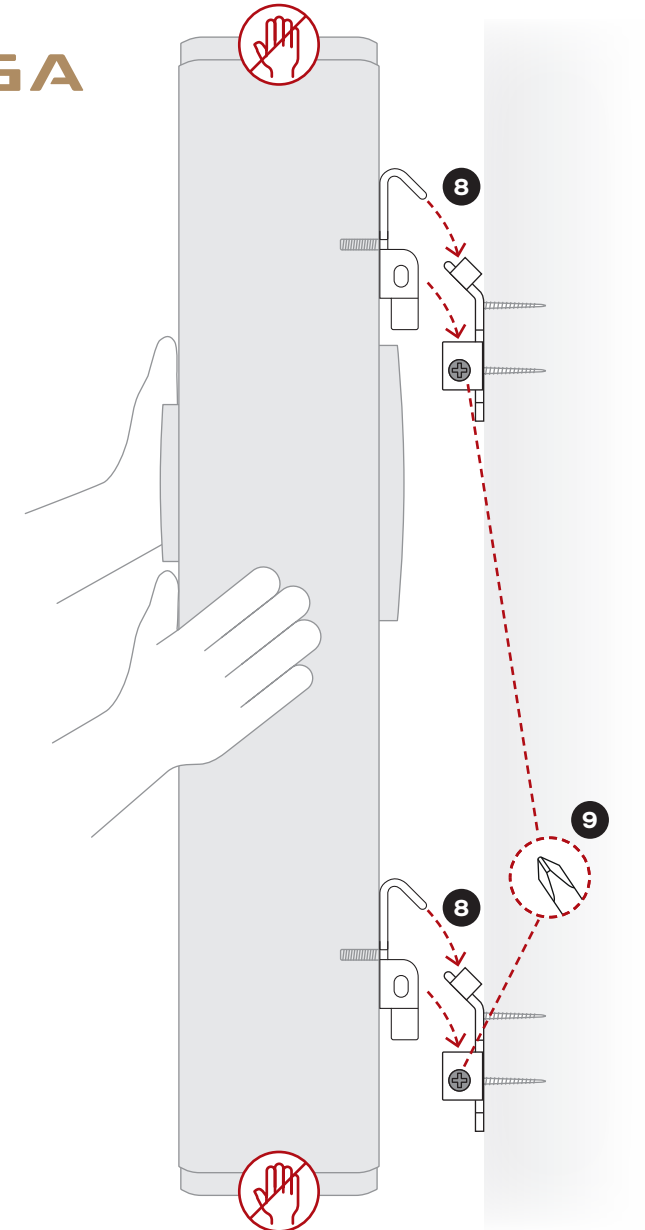

8. WIRED CONNECTIONS


The DALI VEGA provides a wide variety of connection options for integration into your home audio system.

Wired connection sockets are located in the connection panel and include the following options:

Subwoofer Output: A single RCA Phono socket allows you to connect an external subwoofer to enhance the bass performance of your DALI VEGA. The subwoofer output signal is mono and low-pass filtered to 120 Hz.

Analogue Input: A stereo pair of RCA Phono sockets enables the connection of an external audio source with line-level outputs. This might be a CD player or turntable with built-in RIAA, for example.

Optical Input: A TOSLINK optical digital audio socket enables the connection of an external audio source with an optical digital output. This might be a TV or a CD player, for example.

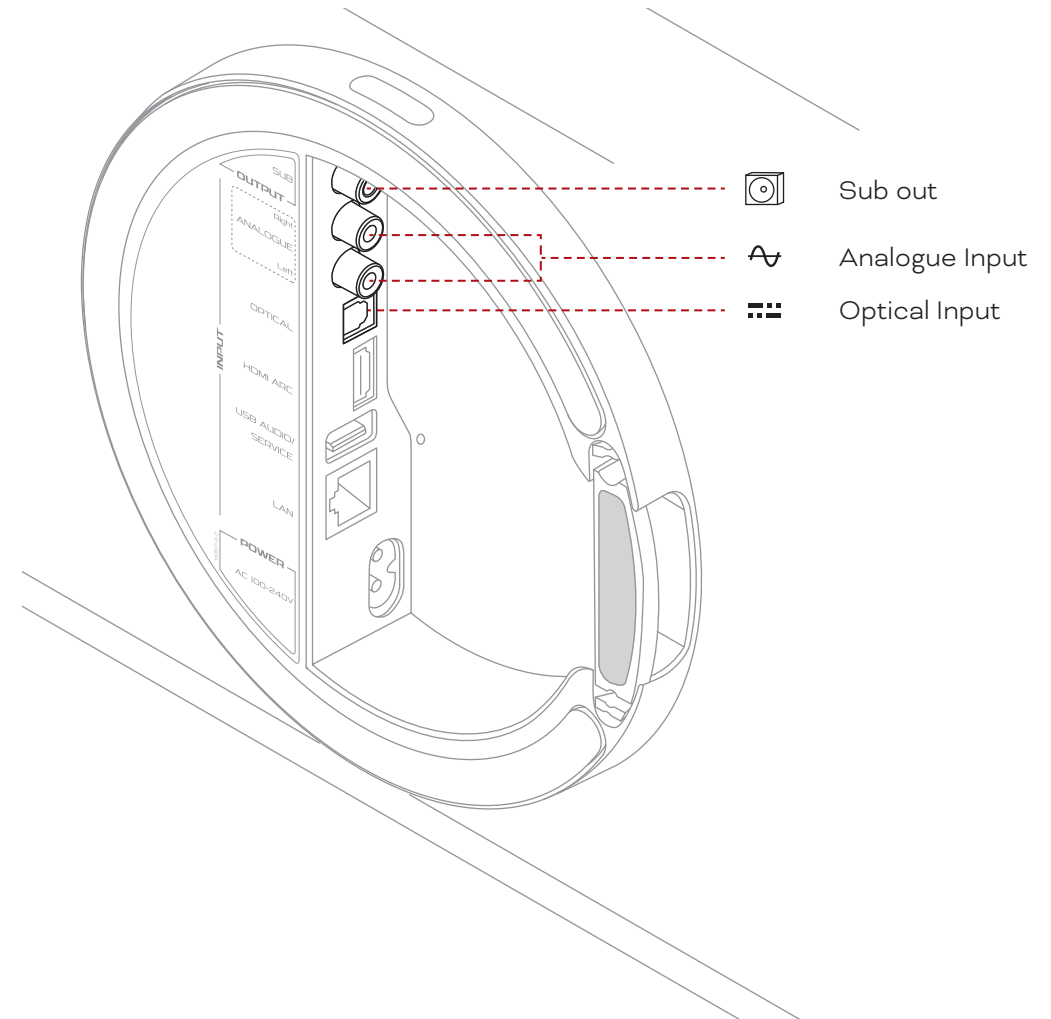

8. WIRED CONNECTIONS

HDMI ARC: If you have a TV set with an HDMI ARC (Audio Return Channel) connector, connect it to the HDMI ARC connector of your DALI VEGA. You may also need to select external speakers for audio playback and enable CEC (Consumer Electronics Control) in your TV's settings menu. The TV audio output format should be set to "PCM" or "Stereo".

Using HDMI and CEC, you can use your TV remote to control the Volume, Mute, and Standby functions of your DALI VEGA.


! If your TV does not support HDMI ARC, or if you are experiencing HDMI compatibility issues, DALI recommends using an optical connection from the TV's optical audio output to your DALI VEGA.

In this scenario, you can still use the HDMI connection to control the DALI VEGA via CEC using your TV remote control.

To use your TV remote to control basic DALI VEGA functions (volume, mute, power on/off) via HDMI, HDMI CEC must be enabled on your TV.

HDMI CEC has different names depending on the TV brand:

- Samsung: Anynet+
- LG: SimpLink
- Sony: Bravia Sync
- Phillips: EasyLink
- Panasonic: Viera Link
- Hitachi: HDMI-CEC

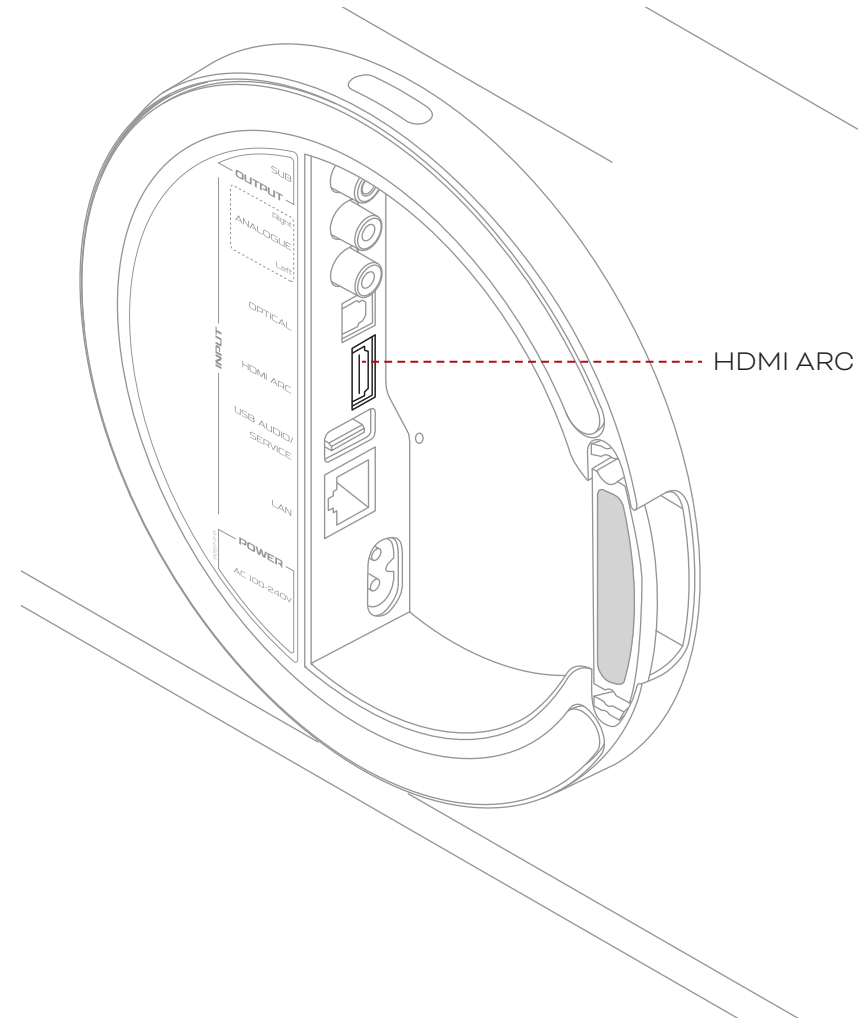

8. WIRED CONNECTIONS


USB Audio / Service: The DALI VEGA USB socket has two functions. Firstly, it enables music files stored on USB storage media, such as hard drives and pen drives, to be played by the DALI VEGA and made accessible via BluOS over the home network to which the DALI VEGA is connected. Secondly, the DALI VEGA USB socket enables software updates and service functions.

→ Getting started with BluOS

Power / Standby LED: The Power/Standby LED indicates the power state of the DALI VEGA.

LAN (Network): The DALI VEGA network socket provides the music streaming features of the BluOS app via a wired network connection. If your DALI VEGA is to use a wired network connection, connect the network socket to a home network router or switch using a standard network cable.


Power: Connect your DALI VEGA to mains power using the supplied mains cable.

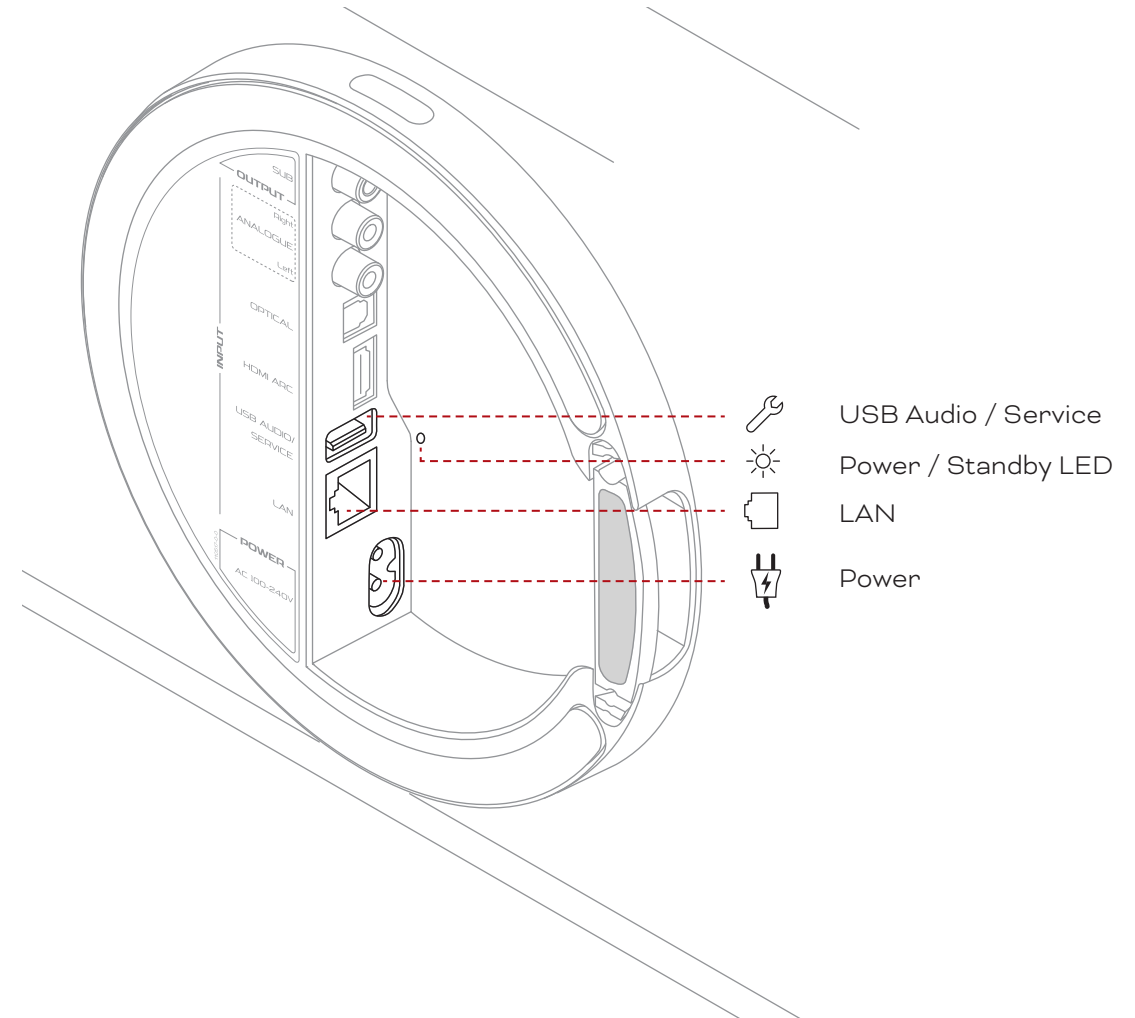

9. DALI VEGA CONFIGURATION

With your DALI VEGA positioned and connected to mains power, your wireless network, and the required wired sources, you can begin configuration.

The DALI VEGA is configured using the menu display. Use the **Volume Wheel** to select menu options. Tap the surface of the **Volume Wheel** to confirm selections. Use the **Back/Exit** button to the left of the **Volume Wheel** to save selected options and simultaneously step back through the setup menus.

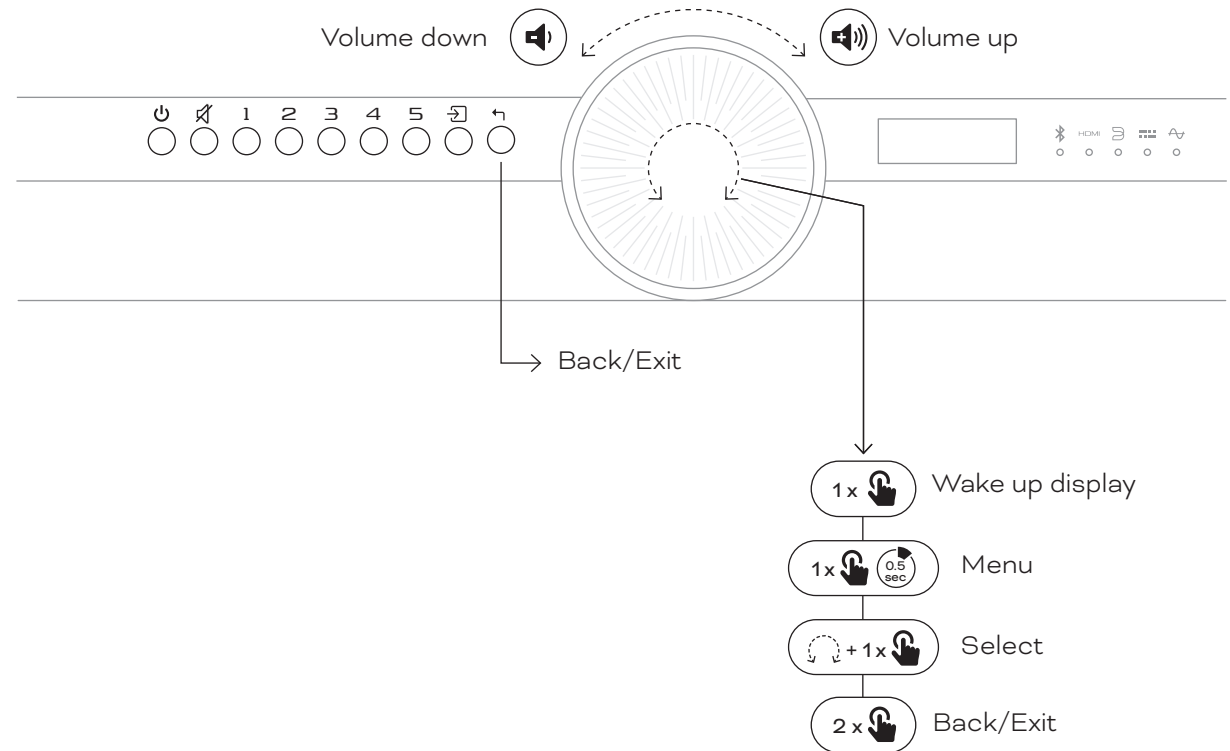


9. DALI VEGA CONFIGURATION

DALI VEGA Menus

To access the DALI VEGA configuration menus, tap and hold the centre of the **Volume Wheel** once. The top level of the configuration menus will show in the display. Turn the **Volume Wheel** to scroll up and down the menu and tap the centre of the volume wheel again to select a menu option and enter its sub-menu.

The configuration options available under each top-level menu item are described in the following paragraphs.

! If no selection is made in a menu within 10 seconds, the DALI VEGA display will revert to the opening screen.

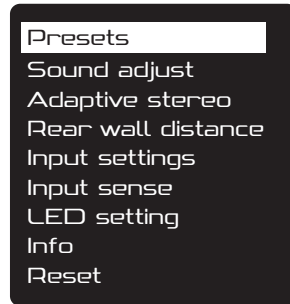

Presets

 
The **Presets** menu displays and enables activation of the presets made in the BluOS app. A total of 10 BluOS presets can be assigned (via the BluOS app) to the five Preset buttons to the left of the Volume Wheel.

Presets 1 to 10

The Preset buttons enable immediate selection of any stored items such as radio stations or streaming services.

A single press activates presets 1 to 5.
A double press activates presets 6 to 10.

Any additional saved BluOS presets can be found in the **Presets** menu, where up to 40 presets can be activated. You can assign any currently selected source — such as an internet radio station or streaming service — to one of the Preset buttons for quick recall.





[How to add or delete a Preset](#)

9. DALI VEGA CONFIGURATION

Sound adjust

The **Sound adjust** menu allows selecting **Direct** audio (default DALI VEGA sound) or **Custom EQ** (equalisation).

If the **Custom EQ** option is selected, a display offers bass and treble adjustment, +/-10 dB, in 2 dB steps. Adjust the bass and treble using the **Volume Wheel**.

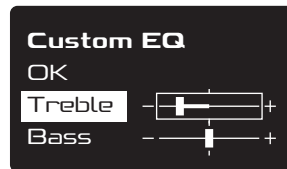
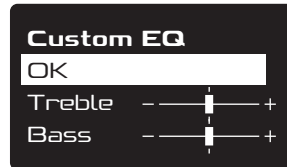


DALI Adaptive Stereo Enhancement™

The DALI VEGA incorporates DALI-developed Adaptive Stereo Enhancement (ASE) technology that can enhance the stereo experience from compact speakers by making the sound more expansive, immersive, and engaging. DALI Adaptive Stereo Enhancement is enabled by default but can be disabled if preferred.

The **Adaptive stereo** menu lets you enable or disable Adaptive Stereo Enhancement. Select the required option using the **Volume Wheel**.

- When Adaptive Stereo Enhancement is activated, it will be indicated with the ASE logo ((A)) on the bottom left of the main display.

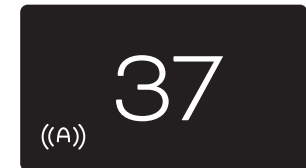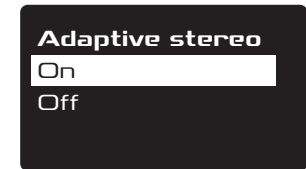


9. DALI VEGA CONFIGURATION

Rear wall distance

The sound of your DALI VEGA, like any loudspeaker, is affected by the presence of nearby room boundaries. The **Rear wall distance** menu allows adjustment of the DALI VEGA sound based on its distance from a wall.

Use the **Volume Wheel** to select the option that best matches the distance of your DALI VEGA from the rear.

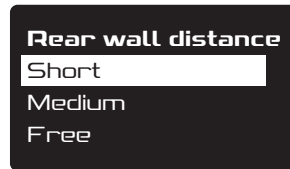


- ! **Short:** Less than 10 cm (3.9 inches) rear wall distance
- Medium:** 10 - 50 cm (3.9 - 19.6 inches) rear wall distance
- Free:** More than 50 cm (19.6 inches) rear wall distance

The **Rear wall distance** menu is disabled when the DALI VEGA is wall-mounted.

Input settings

The **Input settings** menu enables configuration of options specific to the Bluetooth, HDMI, and Optical inputs.

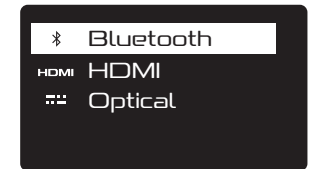

The options are:

- Bluetooth:** **Release connection** and **Clear pairings.**
- HDMI:** **Audio delay.**
- Optical:** **Signal detect** and **Carrier detect.**


! HDMI audio delay enables TV lip sync to be optimised.

Optical input signal detect and carrier detect enable the DALI VEGA automatically to select its optical input when either the optical source is simply switched on, or only when an audio signal is present.

9. DALI VEGA CONFIGURATION

Input sense

The **Input sense** menu enables DALI VEGA to switch on from Standby as soon as a signal is present on any input and automatically shut down after 20 minutes if no input signal is present. **Input sense** can be enabled or disabled. Use the **Volume Wheel** to select the required option.

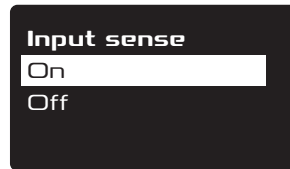


! Analogue and optical inputs are automatically selected when an audio signal is detected, provided input sense is enabled (**On**) and VEGA is not currently playing.

The Bluetooth and BluOS inputs will automatically be selected when the source Play button is pressed.

The HDMI ARC input will automatically be selected when a connected TV is switched on and if VEGA is not currently playing.

LED setting

The **LED setting** menu enables the brightness of the DALI VEGA indicator LEDs to be adjusted. Use the **Volume Wheel** to select the required option.

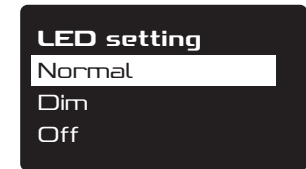


! If the LED setting menu is set to **Off**, the DALI VEGA LEDs are always off, and the current source selection is shown in the bottom-right corner of the display.

9. DALI VEGA CONFIGURATION

Info

The **Info** menu displays system information that may be of use for troubleshooting. Use the **Volume Wheel** to select and view the required information and exit the menu using the **Back/Exit** button.

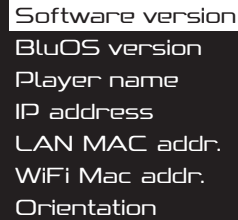


Software version
BluOS version
Player name
IP address
LAN MAC addr.
WiFi Mac addr.
Orientation

Reset

The **Reset** menu allows you to delete your DALI VEGA user settings.

Use the **Volume Wheel** to select the required option and exit the menu using the **Back/Exit** button.

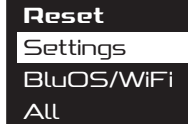

Reset
Settings
BluOS/WiFi
All

- ! The **Settings** option resets all user settings, including Bluetooth pairings, but excluding BluOS presets and Wi-Fi setup.


The **BluOS/Wi-Fi** option deletes saved BluOS presets and resets the Wi-Fi connection, returning the DALI VEGA to BluOS Hotspot Mode, ready for a new Wi-Fi connection.

The **All** option combines the two other reset options.

10. YOUR DALI VEGA IN USE


With your DALI VEGA positioned, connected and configured, its time to enjoy its performance with your favourite music.

To control your DALI VEGA, you can use either its on-body **Buttons** and **Volume Wheel** or its **Remote Control**. The Remote Control and its buttons are illustrated on the next page.

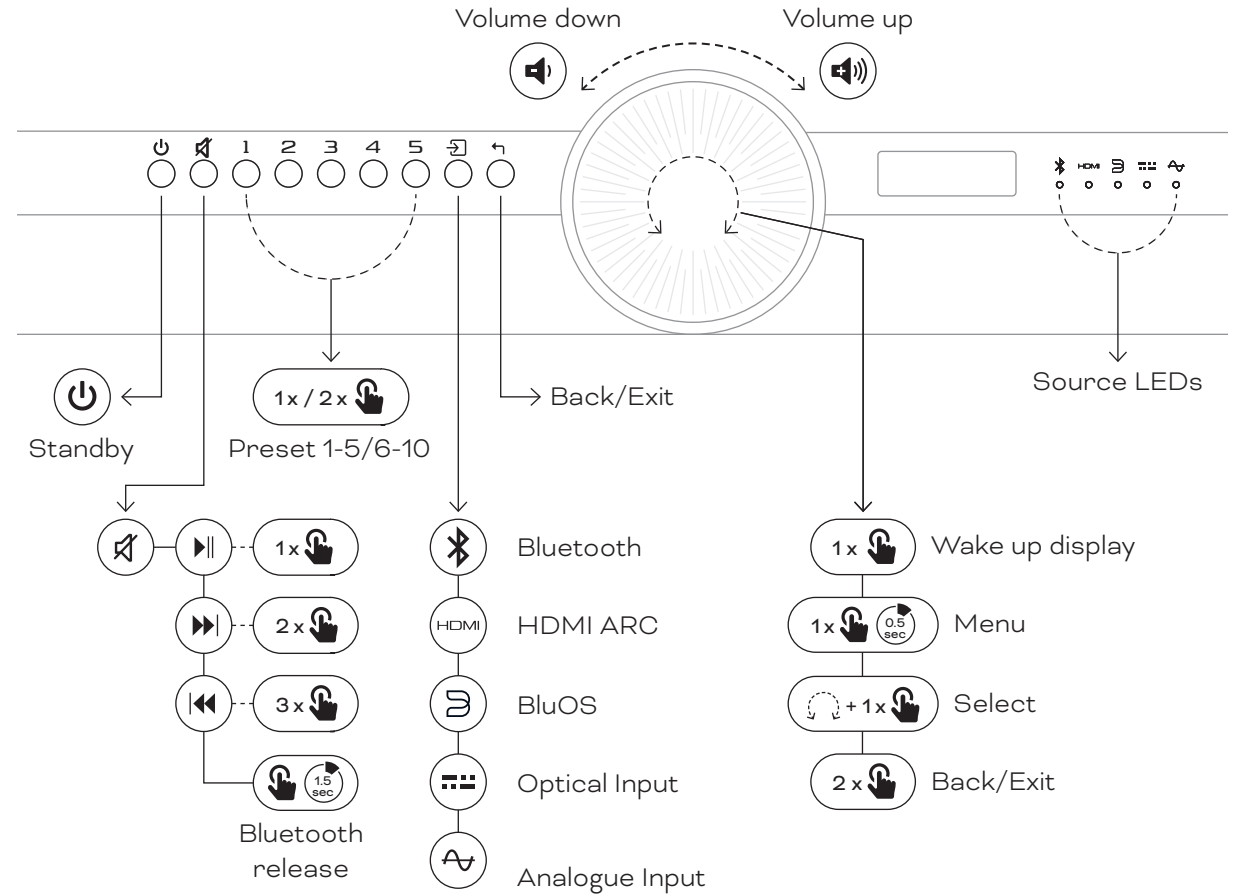

10. YOUR DALI VEGA IN USE

The DALI VEGA Remote Control duplicates the most frequently used functions of the DALI VEGA speaker.

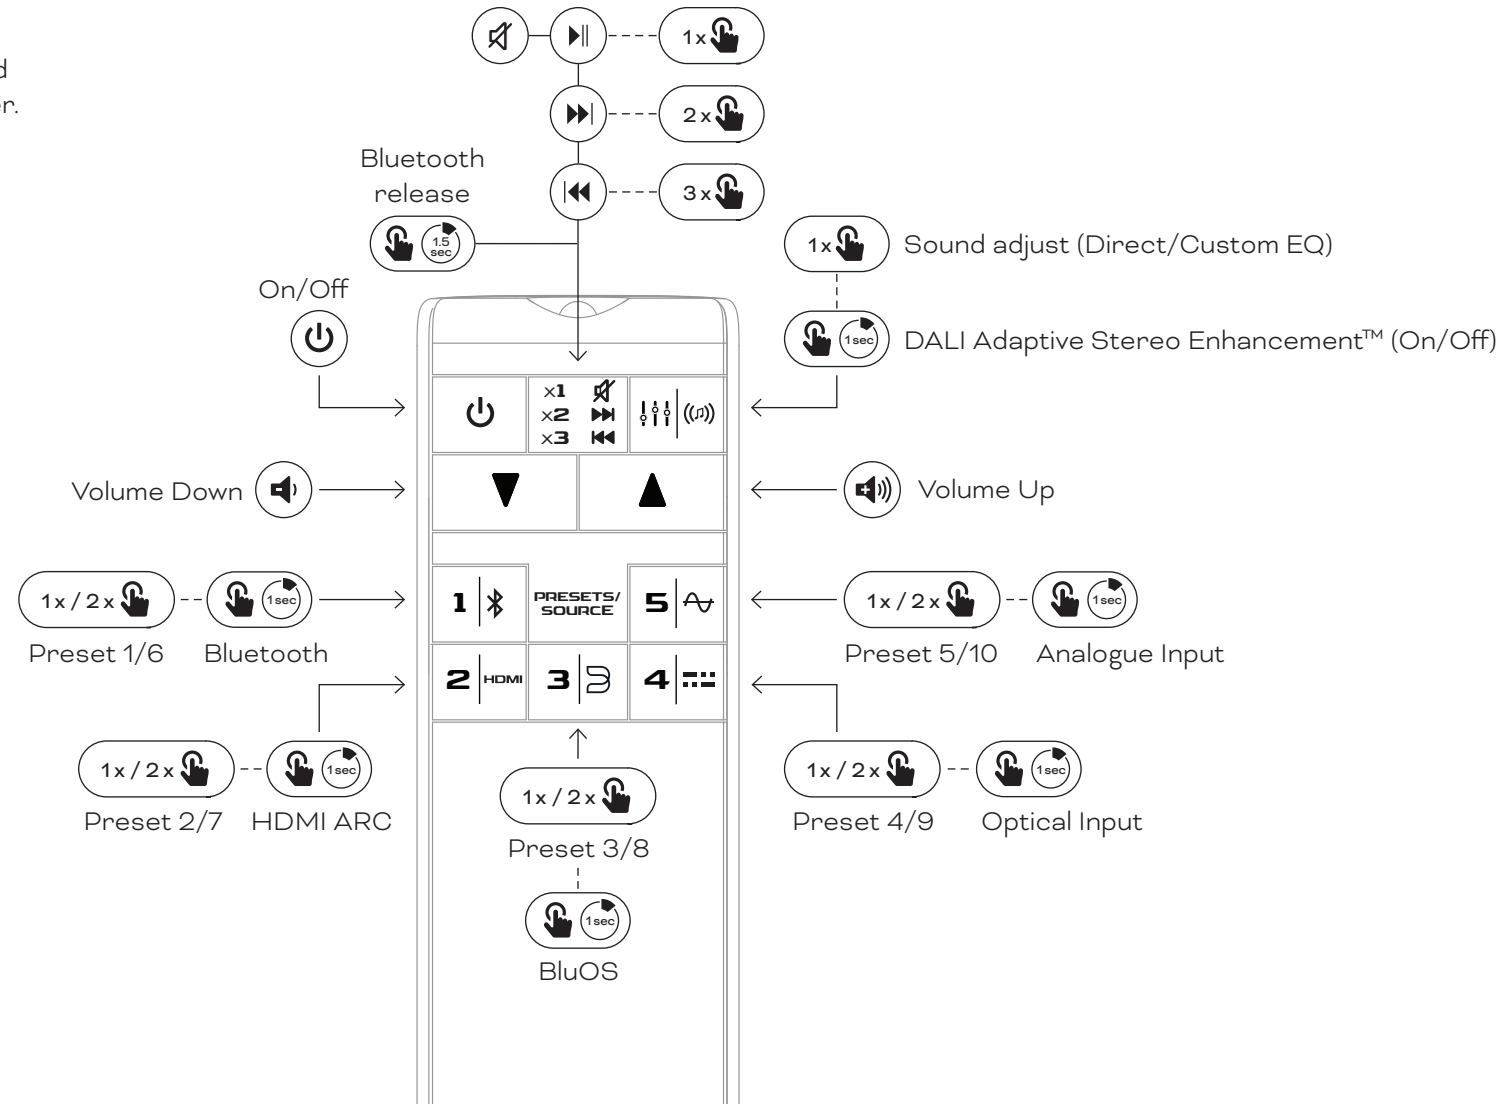

10. YOUR DALI VEGA IN USE

DALI VEGA Buttons and Volume Wheel

From left to right, the DALI VEGA buttons provide the following functions:

 
Standby button

Press the Standby button to wake your DALI VEGA or return it to standby.

 DALI VEGA power consumption in standby mode is less than 0.5 Watts.


Mute button

Press the **Mute** button to silence or restore audio. If the currently selected source offers playback controls, the **Mute** button will control its functions: press once for **Play/Pause**, twice for **Skip forward**, and three times for **Skip backward**. Press and hold the **Mute** button for Bluetooth release.




Preset buttons 1 to 10

 The **Preset** buttons enable immediate selection of any stored items such as radio stations or streaming services.



A single press activates presets 1 to 5.
A double press activates presets 6 to 10.

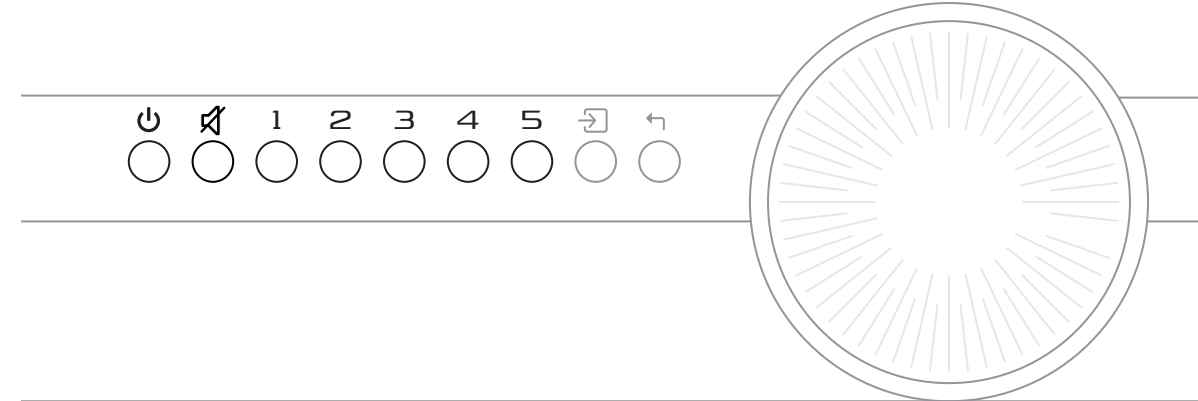

10. YOUR DALI VEGA IN USE

↗ **Input button**


Pressing the **Input** button scrolls through and selects the available DALI VEGA signal inputs in the following order:

-  Bluetooth
-  HDMI ARC
-  BluOS
-  Optical Input
-  Analogue Input

! The first press on the Input button shows the current signal source selection. Subsequent presses toggle through the sources.

↶ **Back/Exit button**


Pressing the **Back/Exit** button steps back through the menu levels.

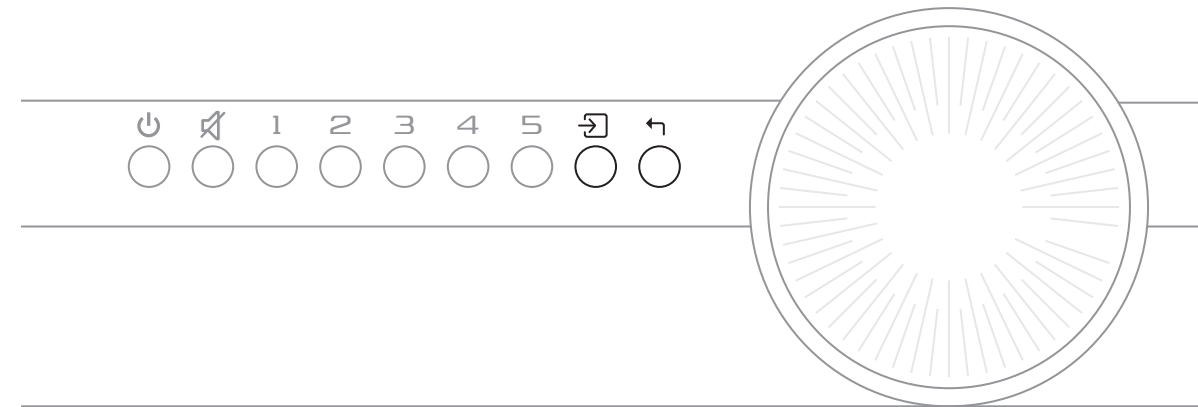

10. YOUR DALI VEGA IN USE

Volume Wheel


When your DALI VEGA is switched on and not in setup menu mode, the **Volume Wheel** controls volume. Turn it clockwise to increase volume and counterclockwise to decrease volume.

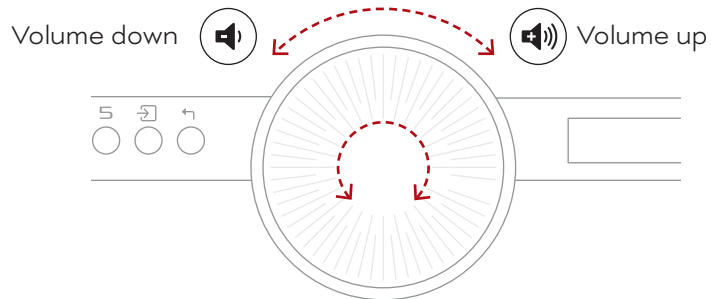

Remote Control

The DALI VEGA Remote Control duplicates the most frequently used functions of the DALI VEGA speaker.

The DALI VEGA Remote Control and its button functions are illustrated on page 24.

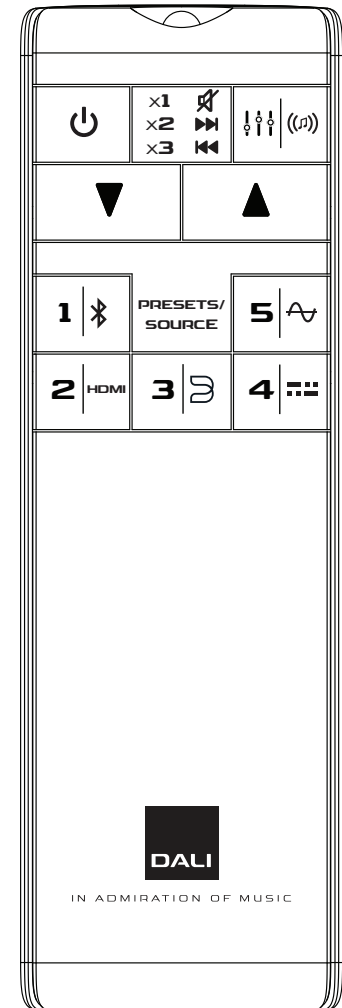

11. BLUETOOTH CONNECTION

11.1 Bluetooth pairing

To connect your Bluetooth device to the DALI VEGA:

1. Turn on the DALI VEGA.
2. Select the Bluetooth input using the Input button.
3. The DALI VEGA is now ready for Bluetooth pairing.
 - a. If the Bluetooth LED is blinking, no device is currently connected.
 - b. If the Bluetooth LED is solid, a device is connected. To disconnect the connected device, use the Bluetooth release function.
 - c. Only one Bluetooth device can be connected at a time.
 - d. Initiate Bluetooth pairing on your device. When pairing is complete, music will be played back from your Bluetooth-connected device.

The DALI VEGA will automatically connect to the latest used device when Bluetooth is selected if a device has been paired to the DALI VEGA earlier, and is within range.


The DALI VEGA will not initiate auto playback. Playback has to be started from the connected device or by pressing the Mute button shortly on DALI VEGA or the remote control.

11.2 Bluetooth release

If you are unable to pair your device with the DALI VEGA:

1. Press and hold the Bluetooth release button (Mute button) until the Bluetooth release sound plays and the Bluetooth LED (LED 1) starts blinking.
2. The connected device is now released, and you can restart pairing.
3. Bluetooth release can also be activated by going to **Input settings** -> **Bluetooth** in the menu system.

! Up to 8 Bluetooth devices can be paired with the DALI VEGA.

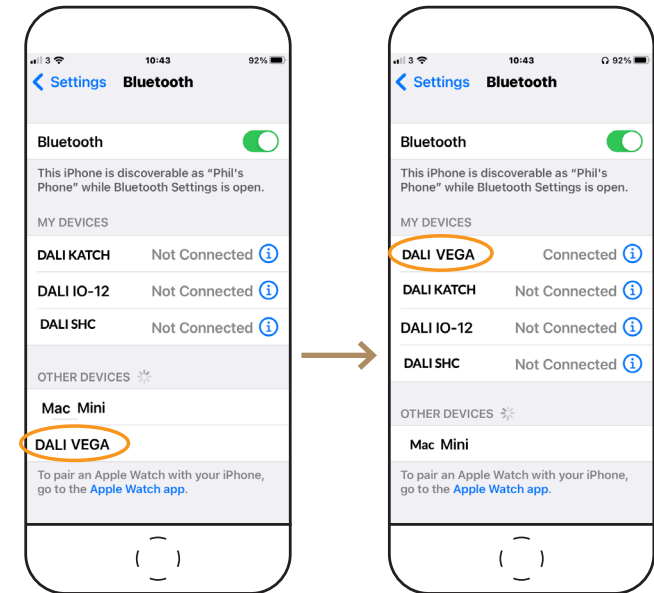

! If you change the name of the DALI VEGA in the BluOS app, the Bluetooth name will change accordingly.

12. CARE AND SUPPORT

Your DALI VEGA should not require any special treatment beyond the kind of care that you would give other high-value items in your home. Use a soft, dry cloth to dust off the case.

DALI does not recommend using any cleaning fluids or sprays.

13. BLUOS TROUBLESHOOTING

The multi-colour light indicator by the BluOS logo also indicates the BluOS status of the DALI VEGA:

	Indicator light code	Description
 / 	Solid red, then flashing green	Powering up / rebooting the unit
	Solid green	Hotspot mode
	Flashing green	Connecting to network
	White pulse	Software update available
	Solid red	Upgrade mode
 / 	Alternate flashing red and green	Upgrading
	Flashing blue	Mute mode
	Solid white	Indexing
	Solid blue	Connected to network – ready to use with the BluOS app
	Flashing red	Factory reset in progress
	Solid purple	Hotspot mode timed out

For more information, see the Bluesound support page:



[Bluesound support page](#)

14. FIRMWARE UPDATES

Updated firmware for your DALI VEGA may occasionally be made available via the BluOS app. Updated firmware may improve performance and reliability or introduce new features.



15. POWER CONSUMPTION

Offline mode

Press the standby button and hold for 5 seconds. This will disable all connections and reduce power consumption to a minimum, until VEGA is reactivated by pressing the standby button again.

Networked standby mode

Networked standby mode is automatically activated if no audio is played and no user selections made for 20 minutes. In this mode, any user action, including starting music playback on any connected source, automatically wakes VEGA.

Deactivation of Wi-Fi

Wireless network functions are automatically deactivated whenever an ethernet cable is connected to VEGA.

Mode	Power consumption	Activation	Deactivation
Active (no audio)	9.2 W	(See deactivation of Networked standby mode)	(See activation of Networked standby mode)
Networked standby (HiNA)	2.9 W	Automatically after 20 mins without audio and user operations	Any user operation, including starting playback
Offline	< 0.7 W	Manually, holding down the standby button	Manually, pressing the standby button

16. DALI VEGA SPECIFICATIONS

DALI VEGA

Frequency range	32 - 22,700 Hz, ±3 dB
Maximum SPL @ 1 m	110 dB
Crossover frequency	2,400 Hz
Crossover principle	2-way, 8-ch active crossover
High frequency driver(s)	4 x 25 mm soft dome
High frequency diaphragm	Soft woven fabric
Low/mid frequency driver(s)	4 x 4½-inch
Low/mid frequency diaphragm	Paper and wood fibre cone
Enclosure type	Tuned mass enclosure 2 x Rectangular passive radiators (3 x 6-inches)
Passive radiator tuning frequency	32 Hz
Amplifier type	Class D Bridge-Tied Load (BTL)
Amplifier output pr. channel	8 x 50 W
Total amplifier output power	400 W
Connection input(s)	1 x HDMI ARC 1 x Analogue input (RCA unbalanced, stereo) 1 x Optical input (Toslink, stereo) 1 x USB Audio/Service (HDD or USB drive)
Connection output(s)	Sub out USB power (5V/1A)
Sub out low pass filter	120 Hz
Digital input formats	PCM, stereo

DALI VEGA

Wireless input(s)	Bluetooth BluOS Spotify Connect Tidal Connect Apple Airplay 2
Bluetooth input codecs	AAC aptX aptX HD
BluOS input codecs	MP3 AAC (M4A, MP4) WMA OGG FLAC ALAC (M4A) WMA-L MQA WAV AIFF (AIF, AIFC) PCM DSD256 (DSD to PCM conversion)
Supported input audio formats	16 - 24 bit audio 32 / 44.1 / 48 / 96 / 192 kHz sample rate
Recommended placement	Standing: Free space Standing: Near wall Standing: Close to corner/wall On wall: Landscape On wall: Portrait

Continues on next page

16. DALI VEGA SPECIFICATIONS

DALI VEGA

Functions	Adaptive Orientation Adjustment Adaptive Stereo Enhancement Up to 40 programmable presets Sound adjust (Direct/Custom EQ) Rear wall distance Bluetooth release/clear HDMI audio delay Optical signal/carrier detect Input sense LED setting Factory reset Stand-by (Auto Power) Mute Power On/Off Volume Source Select
Maximum power consumption	250 W
Standby power consumption	≤ 3 W
Dimensions (H x W x D)	143 x 683 x 243 mm 5.63 x 26.90 x 9.57 inches
Shipping dimensions (H x W x D)	330 x 870 x 200 mm 13.0 x 34.25 x 7.87 inches
Weight	8.7 kg 19.18 lb
Shipping weight	13.3 kg 29.32 lb
Finish	Dark Oak Natural Oak

DALI VEGA

Accessories included	1 x Remote control 2 x AAA batteries (for Remote control) 2 x Wall brackets (Wall) 2 x Wall brackets (VEGA) 2 x Screws for VEGA wall brackets 1 x M6 Allen key 1 x Cable holder 1 x Mains cable 1 x Product registration card 1 x Quick start guide 2 x Wall mounting template 1 x Safety manual
----------------------	---

Legal Notices

The following terms are trademarks or registered trademarks of their respective owners:

Bluetooth®	Bluetooth SIG, Inc.
BluOS™	Bluesound International, a division of Lenbrook Industries Limited
HDMI®	HDMI Licensing Administrator, Inc.
Wi-Fi®	Wi-Fi Alliance